

 
Upute za upotrebu

BEEABeauty

TB-1738





6u1

SET ZA MANIKURU I PEDIKURU




- ※ Da biste osigurali ispravno funkcioniranje ovog uređaja, molimo pročitajte pažljivo ove upute prije korištenja uređaja i sačuvajte ih radi daljnje reference.

UPOZORENJE

-  Sljedeće osobe ne bi trebale koristiti ovaj uređaj: djeca; osobe s upalom kože na prstima ili nožnim prstima; osobe s alergijama; osobe s ograničenim tjelesnim, osjetilnim ili mentalnim sposobnostima; osobe s dijabetesom.
-  Ako se osjećate nelagodno tijekom upotrebe uređaja, molimo prestanite ga koristiti i konzultirajte liječnika.
-  Ne koristite ovaj uređaj u druge svrhe osim za njegu noktiju.
-  Nemojte pokušavati mijenjati, rastavljati ili popravljati uređaj samostalno.

OPREZ

 
-  Ovaj uređaj ima litij-ionsku bateriju. Ne smještajte i ne pohranjujte uređaj na dulje vrijeme na vrućem ili vlažnom mjestu. Ako ne namjeravate dugo vremena koristiti uređaj, pohranite ga tek nakon što ga potpuno napunite.

Specifikacije proizvoda: TB-1738

- Naziv: 6u1 Set za manikuru i pedikuru BEEA Beauty
- Model: TB-1738
- Ulaz: 5V/0.6A
- Snaga: 3.7V/0.81W
- Vrsta baterije: Li-polimer 3.7V 700mAh

Opis proizvoda: TB-1738

- 1 Tipka za paljenje
- 2 Tipka za smjer rotacije
- 3 +/- tipke za brzinu
- 4 USB priključak za punjenje
- 5 Brusna glava (100#)
- 6 Brusna glava za čišćenje noktiju (120#)
- 7 Krom glava za brušenje (150#)
- 8 Glava za poliranje (150#)
- 9 Glava od filca
- 10 Keramička glava za bušenje
- 11 USB kabel
- 12 Kutija za pohranu pribora

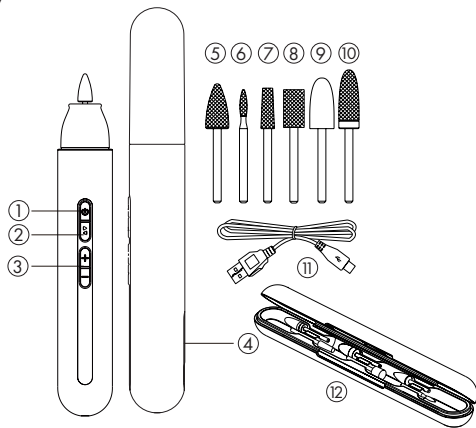


SLIKA 1.

※ Povežite USB kabel s priključkom za punjenje uređaja i adapterom (nije uključen) kako biste započeli punjenje uređaja. Dok se uređaj puni indikator će treperiti crveno, a kada je baterija potpuno napunjena svijetlit će plavo. Kad je baterija skoro prazna, indikator će početi treperiti crveno. Punjenje uređaja traje otprilike 2.5 sata. Kada je baterija puna, uređaj se može neprekidno koristiti oko 90 minuta.

※ Da biste osigurali ispravno rukovanje ovim uređajem, molimo pažljivo pročitajte upute prije upotrebe.


Otvorite kutiju za pohranu pribora. (Slika 2)

 Odaberite i instalirajte priključak prema svojim potrebama. Da biste instalirali priključak, čvrsto ga gurnite na vrh uređaja dok glava ne bude čvrsto postavljena.

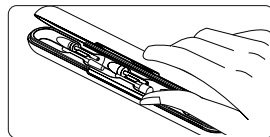


SLIKA 2.

 
- Brusna glava (100#): Koristite ovu glavu za poliranje ruba i strana prirodnih i akrilnih noktiju. Skraćuje i oblikuje vrh noktiju. Također je pogodna za brušenje deblje kože. (Slika 3)
- Brusna glava za čišćenje noktiju (120#): Uklanja suhu kožicu i eksfolira bočne dijelove nokta. (Slika 4)
- Krom glava za brušenje (150#): Polira prirodne i akrilne nokte. Obrezuje rubove nokta i uklanja neravnine kako bi se zagladila površina nokta. Koristite ovu glavu za čišćenje područja kože. (Slika 5)
- Glava za poliranje (150#): Polira i uklanja mrtvu kožu oko područja kožice i sa obje strane nokta. (Slika 6)
- Glava od filca : Pogodna za poliranje i zaglađivanje površine nokta. (Slika 7)
- Keramička glava za bušenje: Koristite ovu glavu za brzo uklanjanje gel laka za fototerapiju. (Slika 8)




SLIKA 3.

 


SLIKA 4.

 


SLIKA 5.

 

SLIKA 6.

 


SLIKA 7.

 


SLIKA 5.

- Nakon postavite priključak koji želite koristiti, pritisnite i držite tipku za napajanje oko 1.5 sekundi da biste uključili uređaj i rotaciju priključka. (Slika 9)
- Za promjenu smjera rotacije, pritisnite tipku za smjer rotacije. Uređaj će trebati 0.5 sekundi za promjenu smjera rotacije. (Slika 10)

 
SLIKA 9.

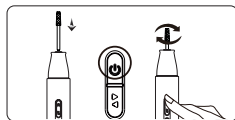

SLIKA 10.

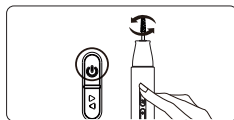 

- Pritisnite i držite gumb + za neprekidno povećavanje brzine do najviše razine.
 - Kratko pritisnite gumb + svaki put kada želite povećati jednu razinu brzine. Brzina se može podesiti u 6 razina.
- Pritisnite i držite gumb - za neprekidno smanjivanje brzine do najniže razine.
 - Kratko pritisnite gumb - svaki put kada želite smanjiti jednu razinu brzine. Brzina se može podesiti u 6 razina.
- Nakon upotrebe, pritisnite tipku za paljenje da biste isključili uređaj.
 - Nakon čišćenja priključaka, pohranite ih u kutiju za pohranu. (Slika 11)

 

SLIKA 11.

Čišćenje i održavanje

TB-1738

- ✘ Isključite uređaj prije početka čišćenja.
- ✘ Ne uranjajte uređaj u vodu. Priključke možete čistiti zasebno.
- ✘ Očistite površinu uređaja čistom blago vlažnom krpom.
- ✘ Ne koristite maziva, deterdžente, sredstva za poliranje ili osvježivače zraka na ovom uređaju.

Pohrana

TB-1738

Ovaj uređaj ima litij-ionsku bateriju. Ne smještajte i ne pohranjujte uređaj na dulje vrijeme na vrućem ili vlažnom mjestu. Ako ne namjeravate dugo vremena koristiti uređaj, pohranite ga tek nakon što ga potpuno napunite.

Odlaganje

TB-1738

Ugrađena baterija sadrži tvari koje mogu zagađivati okoliš. Pri zbrinjavanju ovog uređaja, ne stavljajte ga u kućni otpad. Molimo zbrinite ovaj uređaj u reciklažnom dvorištu kako biste pridonijeli zaštiti okoliša.

 Rješavanje problema

Problem	Mogući uzroci	Rješenje
Neobična buka	Priključak je instaliran nepravilno	Instalirajte priključak ispravno prema uputama
Uređaj ne radi	Baterija je prazna	Naunite uređaj prema uputama
	Baterija je potpuno prazna	
Indikator baterije se ne pali	USB kabel nije ispravno priključen	Pravilno priključite USB kabel u priključak za punjenje uređaja i adapter za punjenje
Priključak je u ekscentričnom položaju	Priključak nije ispravno instaliran	Instalirajte priključak ispravno prema uputama
Priključak se lako otpada		
Drugi problemi		Molimo konzultirajte lokalnog prodavatelja
Napomena: Ako uređaj i dalje ne radi ispravno nakon korištenja gore navedenih rješenja, molimo prestanite koristiti uređaj i kontaktirajte lokalnog prodavatelja.		

Jamstveni rok počinje teći od datuma kupnje proizvoda**Trajanje jamstva je 1 godina.**

U slučaju kvara uređaj možete reklamirati direktno u trgovini u kojoj je kupljen.

U slučaju manjeg popravka jamstveni rok se produljuje onoliko koliko je kupac bio lišen upotrebe stvari, međutim kada je zbog neispravnosti stvari izvršena njezina zamjena ili njezin bitni popravak, jamstveni rok počinje teći ponovo od zamjene, odnosno vraćanja popravljene stvari.

Ako je zamijenjen ili bitno popravljen samo neki dio stvari, jamstveni rok počinje teći ponovno samo za taj dio.

Jamstvo se priznaje samo uz račun o kupnji, ovaj jamstveni list, te detaljan opis kvara.

Ukoliko nije definiran opis kvara, podrazumijeva se da je opis kvara „ne radi“, te da će se uređaj testirati samo na osnovnu funkcionalnost.

Jamstvo se ne priznaje u sljedećim uvjetima:

Ako kupac ne predoči ispravan jamstveni list i račun o kupnji.

Ako se kupac nije pridržavao uputa o korištenju proizvoda

Ako je proizvod otvaran, prepravljn ili popravljan od neovlaštene osobe.

Ako su kvarovi na proizvodu nastali djelovanjem više sile kao što su: udar groma, strujni udar u električnoj mreži, elementarne nepogode i sl.

Ako su kvarovi nastali oštećivanjem, zbog nepropisne upotrebe ili nepravilnim transportiranjem .

Ako je kvar nastao greškom u sustavu na koji je proizvod uključen

Ovo jamstvo ne mijenja zakonska potrošačka prava važeća u Republici Hrvatskoj u odnosu na ona koja propisuje proizvođač.

Ovlašteni servis:

Feniks-Info d.o.o.

Slavonska avenija 72, Zagreb,

servis@feniks-info.hr tel 01/6395 281

 
Datum kupnje: _____

Pečat i potpis: _____

User guide





BEEABeauty
TB-1738

Electric Manicure & Pedicure Set




- ※ To ensure proper operation of this product please read this instruction manual carefully before using the product and keep it for further reference.

WARNING

-  The following people should not use this device: children; people with skin inflammation on the fingers or toes; people with allergies; people with reduced physical, sensory or mental capabilities; people with diabetes.
-  If you feel uncomfortable while using the device, please stop using it and consult a doctor.
-  Do not use this device for any other purpose than nail care.
-  Do not attempt to modify, disassemble, or repair the device by yourself.

CAUTION

-  This device has a lithium battery. Do not place or store the device for a long time in a hot or humid environment. If you do not intend to use the device for a long time, store it after the battery is full.

Device Specifications

 
TB-1738

- Name: Electric Manicure & Pedicure Set
- Model No.: TB-1738
- Input: 5V~/0.6A
- Power: 3.7V~/0.81W
- Type of Battery: Li-polymer 3.7V 700mAh

Device Description

TB-1738

- ① Power Button
- ② Rotation Direction Button
- ③ +/- Speed Buttons
- ④ USB Charging Port
- ⑤ Emery Head (100#)
- ⑥ Emery Nail Groove Head (120#)
- ⑦ Chrome Grinding Head (150#)
- ⑧ Polisher Cylinder Head (150#)
- ⑨ Felt Cone
- ⑩ Ceramic Drill Head
- ⑪ USB Cable
- ⑫ Accessories Storage Box

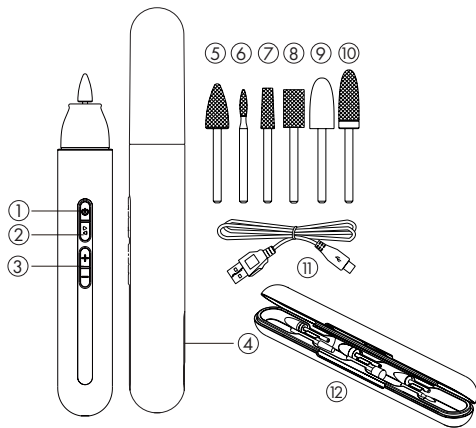


PICTURE 1.

Preparing the Device for Use

TB-1738

 - ※ Charging the device: Connect the USB cable to the device charging port and to the adapter to start charging the device. The indicator flashes red while the device is charging and turns blue when the battery is full.
- ※ The battery indicator flashes red when the battery is low. If the device runs out of battery, it will automatically shut down after the charging indicator flashes.
- ※ Charging the device takes approximately 2.5 hours. When the battery is full, the device can be used consecutively for about 90 minutes.

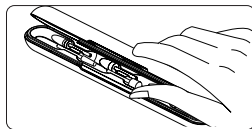

PICTURE 2.

 
How to Use

TB-1738


To ensure the correct operation of this device, please read the instructions carefully before use.

- ① Open the accessories storage box. (Picture 2)
- ② Select and install the attachment according to your needs. To install the attachment, push it firmly into the top of the device until the head is firmly in place.


- Emery Head (Cone Type 100#): Use this head to polish the edge and sides of natural and acrylic nails. Shortens and shapes the tip of your nails. It is also suitable to grind thicker skin. (Picture 3)
- Emery Nail Groove Head (Needle Tip Type 120#): Removes dry cuticle skin and exfoliates the lateral nail folds. (Picture 4)
- Chrome Grinding Head (150#): Polishes natural and acrylic nails. Trims nail edges and buffs out any ridges to smooth the nail surface. Use this head to clean the cuticle area. (Picture 5)
- Polisner Cylinder Head (150#): Polishes and removes dead skin around the cuticle area and both sides of the nail. (Picture 6)
- Felt Cone: Suitable to polish and smooth the nail surface. (Picture 7)
- Ceramic Drill Head (Corn Type): Use this head to quickly remove phototherapy gel polish. (Picture 8)




PICTURE 3.

 


PICTURE 4.

 


PICTURE 5.

 

PICTURE 6.

 


PICTURE 7.

 


PICTURE 8.

- After you install the attachment, press and hold the power button for around 1.5 seconds to turn on the device and the attachment rotation. (Picture 9)
- To switch the rotation direction: press the rotation direction button to change the rotation direction. The device will take 0.5s to change the direction rotation. (Picture 10)

 PICTURE 9.

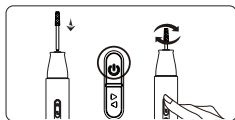

PICTURE 10.

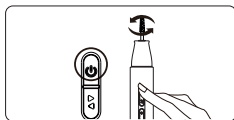 


• **To increase the speed:**

- Press and hold the + button to adjust the speed continuously up to the highest level.
- Short press the + button each time you want to increase one speed level. The speed can be adjusted up to 6 times.

• **To decrease the speed:**

 - Press and hold the - button to adjust the speed continuously to the lowest intensity level.
- Short press the - button each time you want to decrease one speed level. The speed can be adjusted up to 6 times.
- After use, press the power button to turn off the device. After cleaning the attachments, store them in the storage box. (Picture 11)



PICTURE 11.

Cleaning & Maintenance

TB-1738

- ⓘ Make sure the device is power off before you start cleaning.
- ⓘ Do not immerse the device in water. The attachments can be cleaned separately.
- ⓘ Clean the surface of the device with a clean damp cloth.
- ⓘ Do not use lubricants, detergents, polishing agents, or air fresheners on this device.

Storage

TB-1738

This device has a lithium battery. Do not place or store the device for long periods under a hot or humid environment. If you do not intend to use the device for a long time, store it after it is fully charged.

Recycling

TB-1738

The built-in battery contains substances that may pollute the environment. When disposing of this device, do not put it in the general household waste. Please dispose of this device in an official recycling point to contribute to environmental protection.

 Troubleshooting

Problem	Possible Cause	Solution
Abnormal noise.	The attachment was installed incorrectly.	Install the attachment correctly as guided.
The device does not work.	The battery is low.	Charge the device as guided.
	The battery is out of power.	
The battery indicator does not light up.	The USB cable is not properly connected.	Plug the USB cable correctly into the device charging port and charging adapter.
The attachment is in an eccentric position.	The attachment was not installed correctly.	Install the attachment correctly as guided.
The attachment easily falls.		
Other problems.		Please consult your local retailer.
Note: If the device still does not work properly after using the above solutions, please stop using the device and contact your local retailer.		

The warranty period starts from the purchase date.

The warranty period is 1 year.

In case of failure, you can return device directly in the store where it was purchased with the purchase invoice, this warranty card, and a detailed description of the defect.

The warranty will be void under the following conditions:

- If the customer does not present the correct warranty card and purchase receipt.
- If the customer did not follow the instructions for using the product
- If the product has been opened, modified or repaired by an unauthorized person.
- If product defects were caused by force majeure such as: lightning strike, electric shock in the electrical network, natural disasters, etc.
- If the defects were caused by damage, improper use or improper transportation.
- If the failure was caused by an error in the system to which the product is connected

This guarantee does not change the legal consumer rights valid in EU in relation to those prescribed by the manufacturer.

Authorized service:

Feniks-Info d.o.o.

Slavonska avenija 72, Zagreb, Croatia

servis@feniks-info.hr phone 01/6395 281

Date of purchase: _____

Stamp and signature: _____