 


Upute za upotrebu

# **BEEA**Beauty



TB-1788

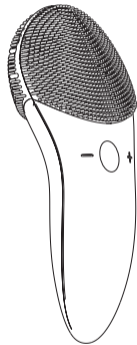


Silikonski, Sonic  
**ČISTAČ ZA LICE**







Kako biste osigurali ispravan rad ovog proizvoda, molimo pažljivo pročitajte ove upute prije korištenja proizvoda i sačuvajte ih za buduću referencu.

#### UPOZORENJE

-  Ne koristite ovaj uređaj u sljedećim uvjetima: trudnice ili za vrijeme dojenja; osobe alergične na silikon; osobe s poremećajima živaca lica; osobe koje imaju metalne, silikonske ili plastične implantate na licu zbog prijeloma ili plastične kirurgije; na područjima s otvorenim ranama, ispucale ili otečene kože; ako imate teške bolesti kože ili bilo koje druge stanje kože na licu.
-  Provjerite uređaj prije početka uporabe. Ne koristite ga ako je oštećen.

-  Ako osjetite nelagodu prilikom korištenja uređaja, odmah prestanite ga koristiti i posavjetujte se s liječnikom.
-  Ne koristite uređaj dok se puni.
-  Ne pokušavajte sami mijenjati, rastavljati ili popravljati uređaj kako biste izbjegli nesreće.

#### OPREZ

-  Ne dijelite isti uređaj s drugima.
-  Držite uređaj izvan dohvata djece.
-  Redovito čistite uređaj kako biste produžili njegov vijek trajanja.
-  Ovaj uređaj ima litij-ionsku bateriju. Ne ostavljajte i ne skladištite uređaj na vrućem ili vlažnom mjestu.

## Specifikacije proizvoda

 
TB-1788

- Naziv: Čistač za lice BEEA Beauty, silikonski, Sonic
- Model: TB-1788
- Ulaz: 5V/310mA
- Snaga: 3.7V=/0.3W
- Tip baterije: Li-ion 3.7V 500mAh

## Opis proizvoda

TB-1760

1. Površina četke za čišćenje silikomom
2. Površina četke za eksfolijaciju silikomom
3. Gumb za uključivanje
4. Gumb +
5. Gumb -
6. Priključak za punjenje
7. Kabel za punjenje

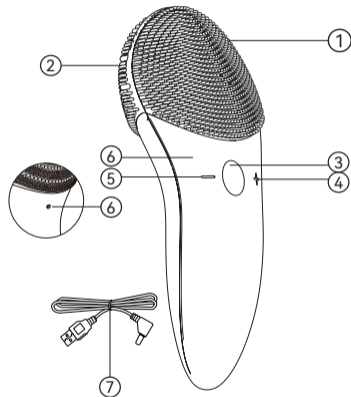

## Priprema uređaja za uporabu

TB-1788

※ Punjenje uređaja traje otprilike 2.5 sata. Kada je baterija potpuno napunjena, uređaj se može neprekidno koristiti oko 3 sata. Kada je baterija prazna, indikator svjetla svijetli crveno. Tijekom punjenja, indikator svjetla treperi crveno. Kada je baterija potpuno napunjena, indikator svjetla svijetli plavo.

- 🗨 **Uključivanje:** Kratko pritisnite gumb za uključivanje da biste uključili uređaj. Prema vašem tipu kože i preferencijama, kratko pritisnite gumb - ili gumb + da biste prilagodili intenzitet čišćenja.
- 🗨 **Isključivanje:** Uređaj ima automatski tajmer i automatski se isključuje nakon 90 sekundi. Ako želite isključiti uređaj prije 90 sekundi, kratko pritisnite gumb za uključivanje

**Čišćenje pora**

- Navlažite lice vodom, nanesite gel/kremu za čišćenje na dlan jedne ruke, drugom rukom držite uređaj i trljajte površinu četke za čišćenje u gel/ kremu za čišćenje da biste stvorili pjenu.
- Nanesite pjenu na lice, nježno pomičite četku za čišćenje kružnim pokretima s unutarne na vanjsku stranu lica. Preporučeno područje čišćenja, redoslijed i vrijeme korištenja: T-zona (čelo, nos) 20 sekundi, lijeva i desna obraza po 15 sekundi (ukupno 30 sekundi), brada 10 sekundi, vrat 30 sekundi.

**Eksfolijacija**

- Navlažite lice vodom, nanesite gel/kremu za čišćenje na dlan jedne ruke, drugom rukom držite uređaj i trljajte površinu četke za eksfolijaciju u gel/ kremu za čišćenje da biste stvorili pjenu.
- Nanesite pjenu na lice i koristite površinu četke za eksfolijaciju da biste eksfolirali kožu. Nježno pomičite četku za čišćenje kružnim pokretima s unutarne na vanjsku stranu lica.



Slika 2

Preporučeno područje čišćenja, redoslijed i vrijeme korištenja: T-zona (čelo, nos) 20 sekundi, lijeva i desna obraza po 15 sekundi (ukupno 30 sekundi), brada 10 sekundi, vrat 30 sekundi.

- Ako imate osjetljivu kožu, preporučuje se upotreba četke za eksfolijaciju silikonom jednom tjedno. Ako imate normalnu, mješovitu ili masnu kožu, koristite četku za eksfolijaciju silikonom prema potrebama svoje kože.
- Nakon upotrebe, isključite uređaj, isperite lice vodom i nanesite hidratantnu kremu.



Slika 3

## Čišćenje i održavanje

TB-1788

- ⚠️ Provjerite je li uređaj isključen prije početka čišćenja.
- ⚠️ Ne uranjajte uređaj u vodu. Operite površinu uređaja pod tekućom vodom i osušite ga suhom krpom.
- ⚠️ Ne koristite lubrikante, deterdžente, sredstva za poliranje ili osvježivače zraka na ovom uređaju.
- ⚠️ Ne koristite vruću vodu iznad 40 °C ili korozivne tekućine za čišćenje silikonskih površina.
- ⚠️ Ne koristite kreme za čišćenje i eksfolijaciju na bazi gline, silikona ili s grubim česticama, jer mogu oštetiti površinu četke na uređaju.

### **Skladištenje:**

Ovaj uređaj ima litij-ionsku bateriju. Ne stavlajte ili skladištite uređaj na dugo vrijeme na vrućem ili vlažnom mjestu. Ako ne namjeravate dugo koristiti uređaj, pohranite ga s napunjenom baterijom.

### **Odlaganje:**

Ugrađena baterija sadrži tvari koje mogu onečistiti okoliš. Pri odlaganju ovog uređaja, nemojte ga bacati u Kućanski otpad, umjesto toga, predajte ga u reciklažno dovrište kako biste pridonijeli zaštiti okoliša.

## Rješavanje problema

TB-1788

Problem	Mogući uzroci	Rješenje
Pritisnem gumb za uključivanje i uređaj ne radi ispravno.	Baterija je pri kraju ili je prazna.	Napunite uređaj.
Indikator punjenja ne svijetli	Kabel za punjenje nije pravilno umetnut.	Pravilno umetnite kabel za punjenje u priključak za punjenje.
Drugi problemi.	/	Obratite se lokalnom prodavaču.
Rješenje Napomena: Ako proizvod i dalje ne radi ispravno nakon korištenja gore navedenih rješenja, prestanite ga koristiti i obratite se lokalnom prodavatelju.		

## Jamstveni list

※ Jamstveni rok počinje teći od datuma kupnje proizvoda. Trajanje jamstva je 1 godina. U slučaju kvara uređaj možete reklamirati direktno u trgovini u kojoj je kupljen. U slučaju manjeg popravka jamstveni rok se produljuje onoliko koliko je kupac bio lišen upotrebe stvari, međutim kada je zbog neispravnosti stvari izvršena njezina zamjena ili njezin bitni popravak, jamstveni rok počinje teći ponovo od zamjene, odnosno vraćanja popravljene stvari. Ako je zamijenjen ili bitno popravljen samo neki dio stvari, jamstveni rok počinje teći ponovno samo za taj dio. Jamstvo se priznaje samo uz račun o kupnji, ovaj jamstveni list, te detaljan opis kvara. Ukoliko nije definiran opis kvara, podrazumijeva se da je opis kvara “ne radi”, te da će se uređaj testirati samo na osnovnu funkcionalnost.

### **Jamstvo se ne priznaje u sljedećim uvjetima:**

- Ako kupac ne predoči ispravan jamstveni list i račun o kupnji.
- Ako se kupac nije pridržavao uputa o korištenju proizvoda
- Ako je proizvod otvaran, prepravljn ili popravljan od neovlaštene osobe.
- Ako su kvarovi na proizvodu nastali djelovanjem više sile kao što su: udar groma, strujni udar u električnoj mreži, elementarne nepogode i sl.
- Ako su kvarovi nastali oštećivanjem, zbog nepropisne upotrebe ili nepravilnim transportiranjem .Ako je kvar nastao greškom u sustavu na koji je proizvod uključen



Ovo jamstvo ne mijenja zakonska potrošačka prava važeća u Republici Hrvatskoj u odnosu na ona koja propisuje proizvođač.

**Ovlašteni servis:**

Feniks-Info d.o.o.

Slavonska avenija 72, Zagreb,

servis@feniks-info.hr; tel 01/6395 281

---

Datum kupnje:

---

 
Pečat i potpis:

User Guide

# **BEEA**Beauty

TB-1788

Sonic  
**FACIAL CLEANSER**

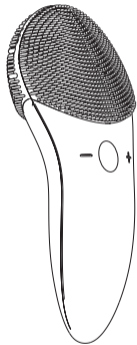






## Safety instructions

TB-1788





To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

### **WARNING**

-  Do not use this device under the following conditions: pregnant woman or while nursing; people allergic to silicone; people with facial nerve disorders; people who have metal, silicone, or plastic implants on the face due to fracture or plastic surgery; on areas with open wounds, chapped or swollen skin; if you have severe skin diseases or any other skin condition on the face.
-  Verify the device before you start using it. Do not use if there is any damage.

-  If you feel any discomfort while using the device, immediately stop using it and consult a doctor.
-  Do not use the device while it's charging.
-  Do not attempt to modify, disassemble, or repair the device by yourself to avoid accidents.

### **CAUTION**

-  Do not share the same device with others.
-  Keep the device out of reach of children.
-  Regularly clean the device to extend its lifetime.
-  This device has a lithium battery. Do not place or store the device for a long period of time under a hot or humid environment.

## Product specifications

 
TB-1788

- Name: Sonic Facial Cleanser BEEA Beauty
- Model No.:TB-1788
- Input: 5V~-310mA
- Power: 3.7V=/0.3W
- Type of Battery: Li-ion 3.7V 500mAh

## Product description

TB-1760

- ① Cleansing Silicone Brush Surface
- ② Exfoliation Silicone Brush Surface
- ③ Power Button
- ④ + Button
- ⑤ - Button
- ⑥ Charging Port
- ⑦ Charging Cable

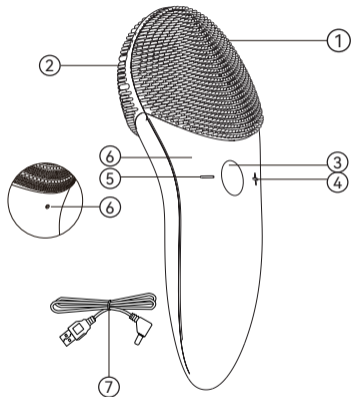

## Preparing the Device for Use

TB-1788

※ Charging the device takes approximately 2.5 hours. When the battery is fully charged, the device can be used consecutively for about 3 hours. When the battery is low, the light indicator lights up red. While charging, the light indicator flashes red. When the battery is fully charged, the light indicator lights up blue.

- 🔋 **Turn On:** Short press the Power Button to turn the device on. According to your skin type and preference, short press the - Button or the + Button to adjust the cleansing intensity.
- 🔋 **Turn Off:** The device has an auto-timer, it automatically turns off after 90 seconds. If you want to turn the device off before 90 seconds, short press the Power Button

## How to use

TB-1788

### Pore Cleansing

- Wet the face with water, apply cleansing gel/cream to the palm of one hand, with the other hand hold the device and rub the Cleansing Surface on the cleansing gel/cream to form a foam.
- Apply foam to the face, gently move the cleansing surface in a circular motion from inside to outside of the face. Recommended cleaning area, order and using time: T-zone (forehead, nose) 20 secs, left and right cheeks 15 secs each (total 30 secs), chin 10 secs, neck 30 secs. (Picture 2)

### Exfoliation

- Wet the face with water, apply cleansing gel/cream to the palm of one hand, with the other hand hold the device and rub the Exfoliation brush on the cleansing gel/cream to form a foam.
- Apply foam to the face and use the Exfoliation brush to exfoliate the skin. Gently move the cleansing head in a circular motion from inside to outside of the face.



Picture 2

- Recommended cleaning area, order and using time: T-zone (forehead, nose) 20 secs, left and right cheeks 15 secs each (total 30 secs), chin 10 secs, neck 30 secs. (Picture 3)
- It is recommended to use the Exfoliation Silicone Brush Surface once a week if you have sensitive skin. If you have normal, combination or oily skin, use the Exfoliation Silicone Brush Surface according to your skin needs.

After use, turn the device off, rinse your face with water and apply moisturizing cream.



**Picture 3**

## Cleaning & maintenance

TB-1788

- Make sure the device is turned off before you start cleaning it.
- Do not immerse the device in water. Wash the device surface under running water and dry it with a dry cloth.
- Do not use lubricants, detergents, polishing agents or air fresheners on this device.
- Do not use hot water above 40°C or corrosive liquids to clean the silicone surfaces.
- Do not use clay-based, silicone-based, grainy cleansers and exfoliators, as they may damage the brush head surface of the device.

### **Storage:**

This device has a lithium battery. Do not place or store the device for long periods in a hot or humid environment. If you do not intend to use the device for a long time, store it with the battery full.

### **Recycling:**

The built-in battery contains substances that may pollute the environment. When disposing of this device, please do not put it in the general household waste. Dispose of this device at a recycling point to contribute to environmental protection.

## Troubleshooting

TB-1788

Problem	Possible Cause	Solution
I press the Power Button and the device does not work properly.	The battery is running low or is out of power.	Charge the device.
The Charging Indicator does not light up.	The Charging Cable is not inserted correctly.	Insert the Charging Cable into the Charging Port correctly.
Other problems.	/	Please consult your local retailer.

Note: If the device still does not work properly after using the above solutions, please stop using the device and contact your local retailer.



## **Warranty**

※ The warranty period starts from the purchase date.

※ The warranty period is 1 year.

※ In case of failure, you can return device directly in the store where it was purchased with the purchase invoice, this warranty card, and a detailed description of the defect.

### **The warranty will be void under the following conditions:**

- If the customer does not present the correct warranty card and purchase receipt.
- If the customer did not follow the instructions for using the product
- If the product has been opened, modified or repaired by an unauthorized person.
- If product defects were caused by force majeure such as: lightning strike, electric shock in the electrical network, natural disasters, etc.
- If the defects were caused by damage, improper use or improper transportation.
- If the failure was caused by an error in the system to which the product is connected

This guarantee does not change the legal consumer rights valid in EU in relation to those prescribed by the manufacturer.

### **Authorized service:**

Feniks-Info d.o.o.

Slavonska avenija 72, Zagreb,

servis@feniks-info.hr; tel 01/6395 281

---

Date of purchase

---

Stamp and signature