 


Upute za upotrebu

BEEABeauty

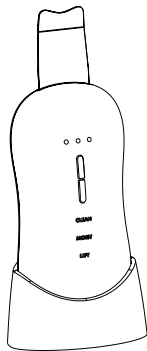







TB-1887

Ultrasonični
ČISTAČ ZA LICE



Da biste osigurali ispravno funkcioniranje ovog uređaja, molimo pročitajte pažljivo ove upute prije korištenja uređaja i sačuvajte ih radi buduće reference.

UPOZORENJE

-  Ovaj uređaj nije igračka, držite ga izvan dohvata djece.
-  Provjerite uređaj prije početka uporabe. Ne koristite ga ako je oštećen.
-  Ako se uređaj koristi u suhom okruženju, rukovanje uređajem može stvarati statički elektricitet. To je normalna pojava i ne utječe na uporabu uređaja.
-  Držite USB kabel i bazu za punjenje suhima.
-  Ne koristite ovaj uređaj na suhoj koži.
-  Ne koristite uređaj ponovno na istom području u kratkom vremenskom razdoblju.
-  Ne koristite ovaj uređaj s jakim eksfolijacijskim proizvodima koji su abrazivni ili sadrže granule.
-  Ne koristite uređaj dok se puni.

OPREZ

-  Sljedeće osobe ne bi smjele koristiti ovaj uređaj: žene u trudnoći, tijekom dojenja ili tijekom menstruacije; osobe s

alergijama; osobe s poremećajima lica; osobe s poremećajima srca, akutnim bolestima ili malignim tumorima; osobe s prijelomima ili implantatima od metala, silikona ili plastike; osobe koje nose elektroničku medicinsku opremu; osobe koje su dugo vremena uzimale lijekove na bazi steroidnih hormona; osobe s otvorenim ranama, ispucale ili otekline kože na području primjene; osobe s teškim kožnim bolestima na licu.

- ⚠ Ne koristite ovaj uređaj na sljedećim područjima: očima i ušima; osjetljivim područjima s ranama, ekcemima, upalama kože itd. ; područjima na kojima je obavljena operacija; područjima s ugrađenim silikonom, metalom, smolom itd. ; područjima s aknama, kožnim čirevima ili drugim kožnim bolestima.
- ⚠ Ovaj uređaj nije namijenjen uporabi od strane osoba (uključujući djecu) s ograničenim tjelesnim ili mentalnim sposobnostima ili nedostatkom iskustva i znanja, osim ako su pod nadzorom ili su im dane upute o uporabi uređaja od strane osobe odgovorne za njihovu sigurnost.
- ⚠ Odmah prestanite koristiti uređaj i konzultirajte liječnika ako osjetite nelagodu.
- ⚠ Držite uređaj izvan dohvata djece.
- ⚠ Redovito čistite uređaj kako biste produžili njegov vijek trajanja.
- ⚠ Ne spajajte ovaj uređaj s drugima.
- ⚠ Ne pokušavajte sami rastaviti, popravljati ili mijenjati uređaj kako biste izbjegli nesreće.
- ⚠ Vežite kosu prije uporabe uređaja i uklonite nakit kako biste spriječili ozljede tijekom uporabe.
- ⚠ Ovaj uređaj ima litij-ionsku bateriju. Ne ostavljajte i ne čuvajte uređaj u vrućem ili vlažnim okruženju. Ako namjeravate dugo vremena ne koristiti uređaj, spremite ga nakon što ga potpuno napunite.

Specifikacije proizvoda

TB-1887

 
- Naziv: Masažer za područje oko očiju BEEA Beauty, EMS, Sonic & Hot
- Model broj: TB-1887
- Ulaz: 5V~/400mA
- Snaga: 3.7V~/4.99W
- Vrsta baterije: Li-polimer 3.7V 800mAh

Opis uređaja

TB-1887

- ① Silikonski zaštitni poklopac
- ② Ultrasonična lopatica (oštrica)
- ③ Tipka za razinu intenziteta
- ④ Tipka za napajanje/način rada
- ⑤ Senzorska traka
- ⑥ Kontaktni točke uređaja
- ⑦ Kontaktni točke bazne stanice za punjenje

- ⑧ Priključak za punjenje baze
- ⑨ USB kabel
- ⑩ Krpa za čišćenje

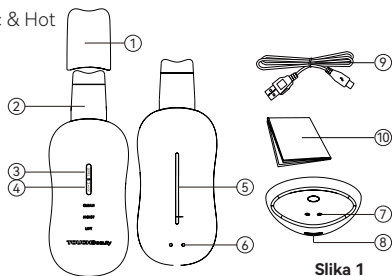



Priprema za upotrebu

TB-1887

- ※ Baterija ovog uređaja je slaba prije prve uporabe. Prije početka uporabe, molimo napunite uređaj pomoću USB kabela.
- ※ Uređaj ima sustav upozorenja o niskom stanju baterije. Kada je baterija prazna, indikatori intenziteta će treptati tri puta, a uređaj će se automatski isključiti.

Punjenje uređaja:

  - Provjerite je li uređaj isključen.
- Povežite USB kabel s bežičnom baznom stanicom za punjenje i adapterom (adapter nije uključen).
- Stavite uređaj na baznu stanicu i priključite napajanje u zidnu utičnicu. (Slika 2)
- Tijekom punjenja, indikatori intenziteta se pale u ciklusu. Kada je baterija puna, indikatori intenziteta neprekidno svijetle. Punjenje uređaja traje otprilike 4 sata.
- Napomena: Ne pokušavajte zamijeniti bateriju uređaja.

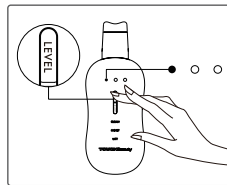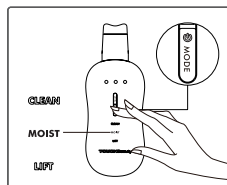

Slika 2

Upotreba

 
TB-1887

Kako biste osigurali ispravan rad ovog uređaja, molimo pažljivo pročitajte upute prije uporabe.


Upravljanje uređajem

1) Tipka za napajanje/način rada

- Pritisnite i držite gumb za napajanje/način rada kako biste uključili uređaj i ČIŠĆENJE (CLEAN) način rada. Kratko pritisnite gumb za napajanje/način rada kako biste promijenili između načina rada "ČIŠĆENJE (CLEAN)" - "OVLAŽIVANJE (MOIST)" - "PODIZANJE (LIFT)".
- U načinu rada PODIZANJE (LIFT), pritisnite gumb za napajanje/način rada kako biste isključili uređaj.
- Da biste isključili uređaj u bilo kojem načinu rada, pritisnite i držite gumb za napajanje. (Slika 3)
- Ovaj uređaj ima automatski tajmer. Automatski će se isključiti nakon 5 minuta korištenja načina na suhoj koži.

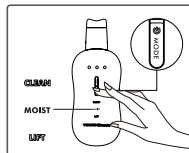

Slika 3

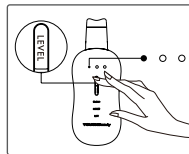 

Slika 4

2) Tipka za razinu intenziteta

 
 
- Nakon uključivanja uređaja, indikator intenziteta svijetli na prvoj razini intenziteta.
- Kratko pritisnite Tipku za razinu intenziteta kako biste promijenili između razina intenziteta u ciklusu “intenzitet 1”, “intenzitet 2”, “intenzitet 3”.

Preporučena uporaba



Tijekom korištenja uređaja, držite tijelo uređaja tako da prsti/ruka dodiruju senzorsku traku na stražnjoj strani uređaja.

Način rada ČIŠĆENJE (CLEAN)



Preporučujemo upotrebu načina rada ČIŠĆENJE (CLEAN) 1-2 puta tjedno. Ne koristite ovaj način rada dulje od 5 minuta svaki put. Uklonite šminku i očistite lice prije početka uporabe uređaja. Navlažite kožu vodom ili tonikom. Uključite uređaj i odaberite način rada ČIŠĆENJE (CLEAN). Prilagodite razinu intenziteta prema potrebama. Stavite prednji (kosi) dio ultrasonične lopatice (oštrice) na kožu pod kutom od 30 °. Polako pomičite lopaticu duž kontura lica kao što je prikazano. Korištenje ovog načina rada pomaže u dubinskom čišćenju kože. (Slika 5)

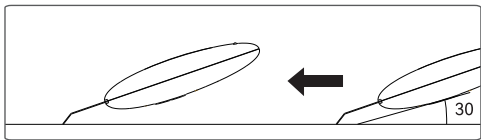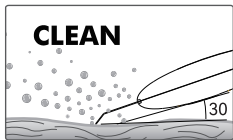

Slika 5

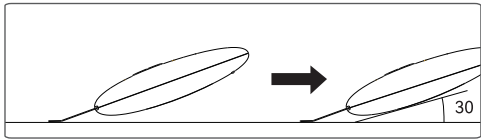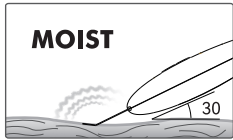  

Slika 6

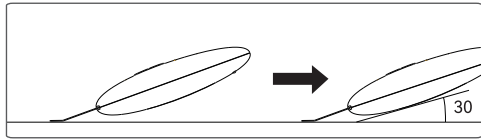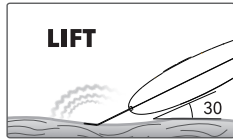  

Slika 7

Način rada OVLAŽIVANJE (MOIST)

Preporučujemo korištenje načina rada OVLAŽIVANJE (MOIST) 3-5 puta tjedno. Ne koristite ovaj način rada dulje od 5 minuta svaki put. Nanesite svoje dnevne proizvode za njegu kože. Uključite uređaj i odaberite način rada OVLAŽIVANJE (MOIST). Prilagodite razinu intenziteta prema potrebama. Stavite prednji (kosi) dio ultrasonične lopatice (oštrice) na kožu pod kutom od 30 °. Polako pomičite lopaticu duž kontura lica kao što je prikazano. Korištenje ovog načina rada pomaže u boljoj apsorpciji proizvoda za njegu kože. (Slika 6).

Način rada PODIZANJE (LIFT)

 
Preporučujemo korištenje načina rada PODIZANJE (LIFT) 2-3 puta tjedno. Ne koristite ovaj način rada dulje od 5 minuta svaki put. Nanesite svoje dnevne proizvode za njegu kože. Uključite uređaj i odaberite način rada PODIZANJE (LIFT). Prilagodite razinu intenziteta prema potrebama. Stavite prednji (kosi) dio ultrasonične lopatice (oštrice) na kožu pod kutom od 30 °. Polako pomičite lopaticu duž kontura lica kao što je prikazano. Korištenje ovog načina rada pomaže u toniranju i učvršćivanju kože. (Slika 7).

Nakon završetka uporabe

- Isključite uređaj pritiskom i držanjem gumba za napajanje/način rada.
- Očistite uređaj krpicom za čišćenje ili mekom, vlažnom krpom.
- Pazite da ne smočite senzorsku traku.
- Vratite silikonski zaštitni poklopac na ultrasoničnu lopaticu (oštricu) za sljedeću uporabu.
- Uklonite i isključite USB kabel iz baze nakon punjenja uređaja.

Područje uporabe

- Koristite uređaj na sljedećim područjima (Slika 8)

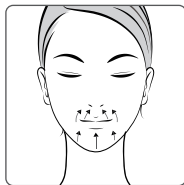

※ Kako biste osigurali najbolje performanse uređaja, očistite ga čistom blago mokrom krpom prije i nakon svake upotrebe

Čišćenje i održavanje

TB-1887

- 👁️ Kako biste osigurali najbolju učinkovitost uređaja, očistite ga čistom blago vlažnom krpom prije i poslije svake uporabe.
- 👁️ Provjerite je li uređaj isključen prije početka čišćenja.
- 👁️ Nemojte uranjati uređaj u vodu. Koristite čistu ili blago vlažnu krpom za čišćenje tijela uređaja i ultrazvučne lopatice (oštrice).
- 👁️ Koristite suhu krpom za čišćenje baze za punjenje. Ako neka područja teško očistiti, obrišite ih blago vlažnom krpom.
- 👁️ Ne koristite lubrikante, deterdžente, sredstva za poliranje ili osvježivače zraka na ovom uređaju.

Pohrana Ovaj uređaj ima litij-ionsku bateriju. Nemojte ga držati ili pohranjivati u vrućem ili vlažnom okruženju. Ako ne namjeravate dugo vremena koristiti uređaj, pohranite ga tek nakon što potpuno napunite bateriju.

Odlaganje Ugrađena baterija sadrži tvari koje mogu zagađivati okoliš. Nemojte uređaj bacati u kućni otpad. Molimo zbrinite ovaj uređaj u reciklažnom dvorištu kako biste pridonijeli zaštiti okoliša.

Rješavanje problema

TB-1887

Problem	Mogući uzroci	Rješenje
Pritisnut gumb za napajanje/ način rada, ali uređaj ne reagira	Baterija je ispražnjena ili nema napajanja	Napunite uređaj prema uputama.
Nemoguće je napuniti uređaj	Kontaktne priključke na uređaju nisu pravilno spojeni s bazom za punjenje	Podesite položaj uređaja dok se kontaktne priključke ne spoje
Drugi problemi.	Zahtijeva specifičnu analizu.	Konzultirajte lokalnog prodavatelja
Napomena: Ako uređaj i dalje ne radi ispravno nakon korištenja gore navedenih rješenja, molimo prestanite koristiti uređaj i kontaktirajte lokalnog prodavatelja.		

Jamstveni list

✘ Jamstveni rok počinje teći od datuma kupnje proizvoda. Trajanje jamstva je 1 godina. U slučaju kvara uređaj možete reklamirati direktno u trgovini u kojoj je kupljen. U slučaju manjeg popravka jamstveni rok se produljuje onoliko koliko je kupac bio lišen upotrebe stvari, međutim kada je zbog neispravnosti stvari izvršena njezina zamjena ili njezin bitni popravak, jamstveni rok počinje teći ponovo od zamjene, odnosno vraćanja popravljene stvari. Ako je zamijenjen ili bitno popravljen samo neki dio stvari, jamstveni rok počinje teći ponovno samo za taj dio. Jamstvo se priznaje samo uz račun o kupnji, ovaj jamstveni list, te detaljan opis kvara. Ukoliko nije definiran opis kvara, podrazumijeva se da je opis kvara “ne radi”, te da će se uređaj testirati samo na osnovnu funkcionalnost.

Jamstvo se ne priznaje u sljedećim uvjetima:

- Ako kupac ne predoči ispravan jamstveni list i račun o kupnji.
- Ako se kupac nije pridržavao uputa o korištenju proizvoda.
- Ako je proizvod otvaran, prepravljan ili popravljan od neovlaštene osobe.
- Ako su kvarovi na proizvodu nastali djelovanjem više sile kao što su: udar groma, strujni udar u električnoj mreži, elementarne nepogode i sl.
- Ako su kvarovi nastali oštećivanjem, zbog nepropisne upotrebe ili nepravilnim transportiranjem. Ako je kvar nastao greškom u sustavu na koji je proizvod uključen.

Ovo jamstvo ne mijenja zakonska potrošačka prava važeća u Republici Hrvatskoj u odnosu na ona koja propisuje proizvođač.

Ovlašteni servis:

Feniks-Info d.o.o.

Slavonska avenija 72, Zagreb,

servis@feniks-info.hr; tel 01/6395 281

Datum kupnje:

 
Pečat i potpis:

User Guide

BEEABeauty

TB-1887

Ultrasonic
BEAUTY DEVICE

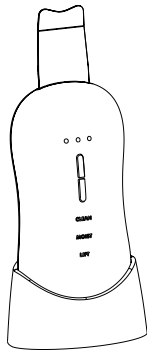









Safety Instructions


TB-1887

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

WARNING

-  This device is not a toy, keep out of reach of children.
-  Please verify the device before you start using it. Do not use if there is any damage.
-  If used in a dry environment, handling this device may generate static electricity. This is a normal phenomenon. It does not affect the use of the device.
-  Keep the USB cable and the charging base dry.
-  Do not use this device on dry skin.
-  Do not use the device repeatedly in the same area over a short time.
-  Do not use this device with strong exfoliating products that are abrasive or contain granules.
-  Do not use the device while charging.

CAUTION

-  The following people should not use this device: pregnant women or while nursing or during menstruation; people

with allergies; people with facial nerve disorders; people with cardiac dysfunctions, acute disease, or malignant tumors; people who have fractures or implants with metal, silicone, or plastic; people wearing electronic medical equipment; people who have taken steroid hormones medication for a long time; people with open wounds, chapped or swollen skin in the area of use; people with severe skin diseases on the face.

- ⊗ Do not use this device in the following areas: eyes and ears; sensitive areas with wounds, eczema, skin inflammation, etc.; areas where surgery has been performed; areas with implanted silicone, metal, resin, etc.; areas with acne, skin ulcers or other skin diseases.
- ⊗ This device is not intended for use by people (including children) with reduced physical, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety.
- ⊗ Immediately stop using the device and consult a doctor if you feel any discomfort.
- ⊗ Keep the device out of reach of children.
- ⊗ Regularly clean the device to extend its lifetime.
- ⊗ Do not snare this device with others.
- ⊗ Do not attempt to disassemble, repair, or modify the device by yourself to avoid accidents.
- ⊗ Tie your hair before using the device and remove jewelry, to prevent injury during use.
- ⊗ This device has a lithium battery. Do not place or store the device for long periods under a hot or humid environment.
- ⊗ If you do not intend to use the device for a long time, store it after it is fully charged.

Device Specifications


TB-1887

- Name: BEEA Beauty Ultrasonic Beauty Device
- Model No.: TB-1887A
- Input: 5V—/0.5A
- Power: 3.7V=/2.4W
- Type of Battery: Li-ion 3.7V 800mAh

Device Description

TB-1887

- | | |
|----------------------------|--------------------------------|
| ① Silicone Protective Cop | ⑥ Device Contact Points |
| ② Ultrasonic Spatula Blade | ⑦ Charging Base Contact Points |
| ③ Intensity Level Button | ⑧ Base Charging Port |
| ④ Power/Mode Button | ⑨ USB Cable |
| ⑤ Sensor Strip | ⑩ Cleaning Cloth |

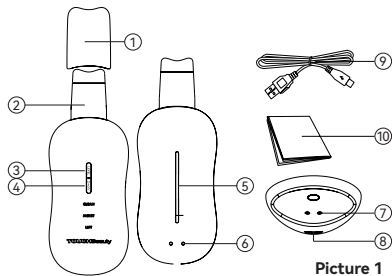 

Picture 1

 
 
Preparing the Device for Use

TB-1887

- ※ This device battery is low before the first use. Please charge the device with the USB cable before you start using it.
- ※ The device has a low battery alarm system. When the battery is low, the intensity indicators will flash three times, and the device will automatically turn off.

Charging the Device

- Make sure the device is turned off.
- Connect the USB cable to the wireless charging base and to an adapter (adapter not included).
- Place the device on the charging base, and plug the power adapter into the wall socket. (Picture 2)
- While charging, the intensity indicators light up in a cycle. When the battery is full, the intensity indicators light up continuously. Charging the device takes approximately 4 hours.
- Note: Do not attempt to replace the device's battery.

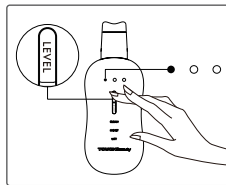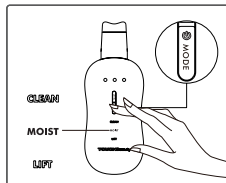

Picture 2

How to Use

 
TB-1887

To ensure the correct operation of this device, please read the instructions carefully before use.


Device operation

1) Power/Mode Button

- Press and hold the power/mode button to turn on the device and the “CLEAN” mode. Short press the power/mode button to change between modes “CLEAN” → “MOIST” → “LIFT”. When in LIFT mode, press the power/mode button to turn off the device. To turn off the device in any mode, press and hold the power button. (Picture 3)
- This device has an auto-timer. It will automatically shut down after 5 minutes of use.

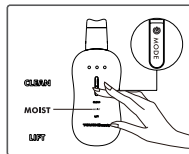

Picture 3

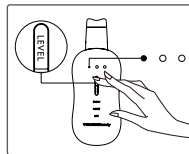 

Picture 4

2) Intensity Level Button

 
 
- After turning on the device, the intensity indicator lights up the first intensity level. Short press the intensity level button to change between intensity levels in a cycle “intensity 1”, “intensity 2”, “intensity 3”.

Recommended Use



While using the device, hold the body so your fingers/hand touch the sensor strip on the back of the device.

CLEAN Mode:



We recommend using the ‘CLEAN’ mode 1 -2 times a week. Do not use this mode for more than 5 minutes each time. Remove makeup and cleanse the face before you start using the device. Dampen the skin with water or toner. Turn on the device and select ‘CLEAN’ mode. Adjust the intensity level according to your needs. Place the front (angled) side of the ultrasonic spatula blade on the skin at a 30 ° angle. Slowly move the spatula along facial contours as illustrated. Using this mode helps to s deep cleansing the skin. (Picture 5)

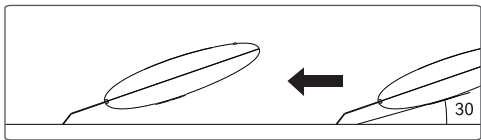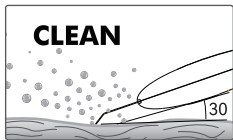

Picture 5

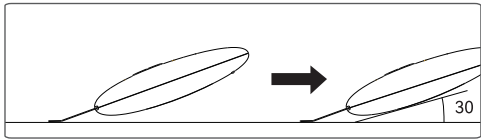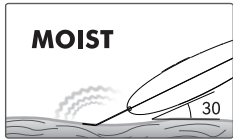  

Picture 6

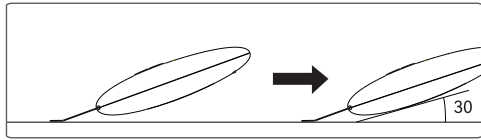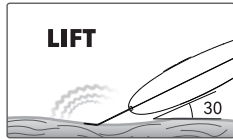  

Picture 7

MOIST Mode:

 
We recommend using the 'MOIST' mode 3-5 times a week. Do not use this mode for more than 5 minutes each time. Apply your daily skincare products. Select the 'MOIST' mode and adjust the intensity level. Place the dock (flat) side of the ultrasonic spatula blade on the skin at a 30Q angle. Slowly move the spatula along facial contours as illustrated. Using this mode helps to boost the absorption of skincare products. (Picture 6)

LIFT Mode:

We recommend using the 'LIFT' mode 3-5 times a week. Do not use this mode for more than 5 minutes each time. After using the 'MOIST' mode, select the 'LIFT' mode and adjust the intensity level. Place the backside of the ultrasonic spatula blade on the skin at a 30s angle. Slowly move the spatula along facial contours as illustrated. Using this mode helps to lift and firm the skin. (Picture 7)

Areas of Use

- Use the device in the following areas (Picture 8)

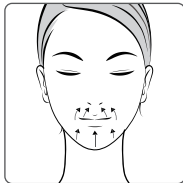

Picture 8

※ Turn off the device after use and clean the ultrasonic spatula blade with the cleaning cloth. Afterward, follow up on your daily skincare routine.

Cleaning and Maintenance

TB-1887

- 🗑️ To ensure the best performance of the device, clean it with a clean slightly damp cloth before and after each use.
- 🗑️ Make sure the device is power off before you start cleaning.
- 🗑️ Do not immerse the device in water. Use a clean cloth or a slightly damp cloth to clean the device body and the ultrasonic spatula blade.
- 🗑️ Use a dry cloth to clean the charging base. If some areas are difficult to clean, wipe it with a slightly damp cloth.
- 🗑️ Do not use lubricants, detergents, polishing agents, or air fresheners on this device.

Storage This device has a lithium battery. Do not place or store the device for long periods under a hot or humid environment. If you do not intend to use the device for a long time, store it after it is fully charged.

Recycling The built-in battery contains substances that may pollute the environment. When disposing of this device, do not put it in the general household waste. Please dispose of this device in an official recycling point to contribute to environmental protection.

Troubleshooting

TB-1887

Problem	Possible Cause	Solution
Press the power/mode button, the device does not work.	The battery is low or out of power.	Please charge the device according to the instructions.
Unable to charge the device.	The contact points in the device are not in contact with the charging base correctly.	Adjust the device position until the contact points are in contact.
Other problems.		Consult your local retailer.

Note: If the device still does not work properly after using the above solutions, please stop using the device and contact your local retailer.

Warranty

- ※ The warranty period starts from the purchase date.
- ※ The warranty period is 1 year.
- ※ In case of failure, you can return device directly in the store where it was purchased with the purchase invoice, this warranty card, and a detailed description of the defect.

The warranty will be void under the following conditions:

- If the customer does not present the correct warranty card and purchase receipt.
- If the customer did not follow the instructions for using the product
- If the product has been opened, modified or repaired by an unauthorized person.
- If product defects were caused by force majeure such as: lightning strike, electric shock in the electrical network, natural disasters, etc.
- If the defects were caused by damage, improper use or improper transportation.
- If the failure was caused by an error in the system to which the product is connected

This guarantee does not change the legal consumer rights valid in EU in relation to those prescribed by the manufacturer.

Authorized service:

Feniks-Info d.o.o.

Slavonska avenija 72, Zagreb,

servis@feniks-info.hr; tel 01/6395 281

Date of purchase

Stamp and signature