

## JAMSTVENI LIST

Jamstveni rok počinje teći od datuma kupnje proizvoda.

Trajanje jamstva je 1 godina.

U slučaju kvara uređaj možete reklamirati izravno u trgovini u kojoj je kupljen.

U slučaju manjeg popravka jamstveni rok se produljuje onoliko koliko je kupac bio lišen upotrebe stvari, međutim kada je zbog neispravnosti stvari izvršena njezina zamjena ili njezin bitni popravak, jamstveni rok počinje teći ponovo od zamjene, odnosno vraćanja popravljene stvari.

Ako je zamijenjen ili bitno popravljen samo neki dio stvari, jamstveni rok počinje teći ponovo samo za taj dio.

Jamstvo se priznaje samo uz račun o kupnji, ovaj jamstveni list,

te detaljan opis kvara.

Ukoliko nije definiran opis kvara, podrazumijeva se da je opis kvara „ne radi“, te da će se uređaj testirati samo na osnovnu funkcionalnost.

Jamstvo se ne priznaje u sljedećim uvjetima:

- Ako kupac ne predoči ispravan jamstveni list i račun o kupnji.
- Ako se kupac nije pridržavao uputa o korištenju proizvoda.
- Ako je proizvod otvaran, prepravljn ili popravljan od neovlaštene osobe.
- Ako su kvarovi na proizvodu nastali djelovanjem više sile kao što su: udar groma, strujni udar u električnoj mreži, elementarne nepogode i sl..
- Ako su kvarovi nastali oštećivanjem, zbog nepropisne upotrebe ili nepravilnim transportiranjem.

Ako je kvar nastao greškom u sustavu na koji je proizvod uključen

 
Ovo jamstvo ne mijenja zakonska potrošačka prava važeća u Republici Hrvatskoj u odnosu na ona koja propisuje proizvođač.

Ovlašteni servis: Feniks Info d.o.o. Slavonska avenija 72, HR-10000 Zagreb, servis@feniks-info.hr

tel. 091 3344 271

Datum kupnje: \_\_\_\_\_

Pečat i potpis: \_\_\_\_\_

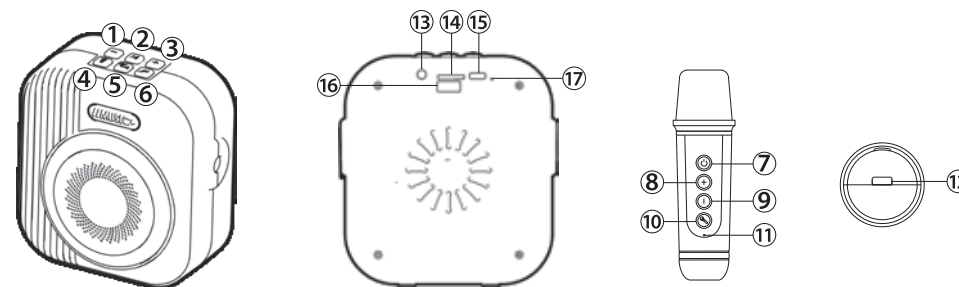


### Function introduction

1. Short Press once for volume reduction, long press once for volume reduction.
2. Manual Switch Play mode,Bluetooth/TF card/U disk, etc..
3. Short Press once to add volume,long press once.
4. Short Press to switch the LED lighting effect, long press 2 seconds to turn off the LED lighting effect.
5. Long press 3 seconds to turn on/off, short press play/pause. double click to turn on/off couplets.
6. Short Press to turn on/off sound cancellation.
7. Long press three seconds to switch the microphone on and off short press once to mute the micro phone.
8. Short Press microphone volume to add, double click reverb to add.
9. Short Press mic volume to reduce, double click reverb to reduce.
10. Short Press to cancel the original sound open/close, long press to switch the magic sound.
11. The Microphone Indicator Light,the unconnected blue light flickers, the connected blue light is always on, the red light is on when charging, the red light is off when full.
12. Microphone Type-c5V charging port.
13. Headphone jack.
14. TF slot, insert MP3 audio class file automatically switch to TF mcde.
- 15.Audio Type-C 5V charging interface.
16. USB plug-in with MP3 audio class files automaticallySwitch to UsB mode.
17. Audio In dicator Light,blue light flicker when notconnected, blue light will be on when connectedsuccessfully, red light will be on when charging, red light will be off when full.

### Frequently asked questions

 1. If the Indicator light does not turn on, Please check whether the audio power is sufficient, or to connect the audio to 5V/1A power supply for charging, charging time is about 3 to 4 hours.
2. There is no sound in the microphone. The power supply is not on, the mode is not correct, or the volume is not adjusted. Please adjust the volume of the microphone.
3. If the stereo does not have reverb, the reverb switch may be off please turn on the reverb switch.
4. If the microphone is noisy, it may be due to ambient noise, signal interference, microphone too close to the speaker, etc, please re-adjust the direction of the microphone.
5. If Bluetooth playback is interrupted. It may be because the Bluetooth is too far away, or there is an obstacle between the phone and the loudspeaker, affecting the signal transmission, please close to the connected phone, avoid the obstacle.
6. If Bluetooth can not be connected, it may be because the distance is too far, there are obstacles, or by other phones connected, please close to the phone to avoid obstacles, disconnect the phone.
7. If you can not charge, check whether the charger is normal, audio charging, the charging port of the red light is on.

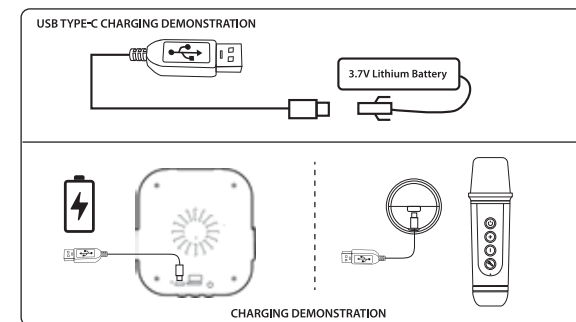

Connect one end of the included USB Type-C cable to the battery, and the other end to a power source.

Instructions for charging the microphone:

1. Plug the USB-A end of the cable into an adapter or a device with a USB-A input and charging capability, such as a laptop.
2. Connect the USB-C end of the cable to the microphone.
3. The red light on the microphone will stay on while it is charging; when it is fully charged, the red light will turn off.
4. When the microphone is fully charged, disconnect it from the charger and you can use it again.

Instructions for charging the stereo speaker:

1. Plug the USB-A end of the cable into an adapter or a device with a USB-A input and charging capability, such as a laptop.
2. Connect the USB-C end of the cable to the speaker.
3. The red light on the speaker will stay on while it is charging; when it is fully charged, the red light will turn off.
4. When the speaker is fully charged, disconnect it from the charger and you can use it again.









USB Type-C charging cable (INCLUDE)

## BATTERY HAZARDS







- DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (nickel-hydrate) batteries.
- DO NOT mix old and new batteries.
- Non-rechargeable batteries should not be recharged.
- Rechargeable batteries must be removed from the device before charging.
- Rechargeable batteries should only be charged under adult supervision.
- Empty batteries must be removed.
- Supply terminals must not be short-circuited.
- It is recommended to use only batteries of the same or equivalent type.
- Batteries should be inserted with the correct polarity.

Batteries are not included in the package!

	Not intended for children under 3 years of age.
	Packaging should not be disposed of in household waste. Please follow appropriate local procedures for disposal.
	This device should not be disposed of with household waste. Take it to a collection point for electrical waste in your community or district to ensure that old devices are recycled professionally and economically, preventing harmful effects on the environment and human health.
	CE Mark Compliance with the requirements of applicable EC directives.
	Recycling Mark This device can be recycled.
	Tested according to international standards.

Specifications, colors, and some parts may differ from the picture.

 
 
 
Baterije ne dolaze u pakiranju!

	Nije namijenjeno za djecu mlađu od 3 godine.
	Ambalaža se ne smije odlagati u kućni otpad. Molimo postupajte u skladu s odgovarajućim lokalnim procedurama za odlaganje.
	Ovaj uređaj se ne odlaže s kućnim otpadom. Predajte ga u sabirno mjesto za električki otpad u vašoj zajednici ili okrugu, kako bi se osiguralo da se stari uređaji recikliraju profesionalno, ekonomično i da se spriječi štetni utjecaj na okoliš i ljudsko zdravlje.
	CE oznaka Sukladnost sa zahtjevima važećih EC direktiva.
	Oznaka recikliranja Ovaj uređaj se može reciklirati.
	Testirano prema međunarodnim standardima

Specifikacije, boje i neki dijelovi mogu se razlikovati od slike.

## UPOZORENJA I NAPOMENE:


- Ako proizvod sadrži rotirajuće dijelove (elise, kotače ...), nemojte ih dirati dok je proizvod upaljen kako bi izbjegli ozlijeđe.
- Nadzor odrasle osobe je potreban za korištenje proizvoda prema propisanoj dobnoj granici proizvoda.
- Prilikom ugradnje baterija u proizvod trebaju biti korištene baterije naznačene u uputama i trebaju biti ugrađene prema naznačenom polaritetu.
- Ne koristite baterije različitih proizvođača u isto vrijeme.
- Ne stavljajte baterije ili proizvode sa baterijama u vatru.
- Ako postoje oštećenja na bateriji ili proizvodu mora se zbrinuti prema propisanom načinu zbrinjavanja električnog otpada.
- Baterije mogu sadržavati opasne tvari. Nemojte ih oštetiti, bušiti, savijati i slično. Nadzor odrasle osobe je potreban djeci prilikom rukovanja baterijama.
- Nemojte kratko spojiti baterije.
- Ako dugo ne koristite proizvod, izvadite baterije iz proizvoda ako je to moguće.
- Baterije punite samo propisanim ili priloženim punjačima. Ako se baterije ne pune adekvatnim načinom, postoji opasnost od požara.
- Ako su baterije potrošene te se ne mogu napuniti uklonite ih iz uređaja.
- Koristite proizvode u sigurnim okruženjima. Nemojte koristiti proizvode u prostorima gdje je puno ljudi, gusta naseljenost, promet i zračna luka.
- Proizvodi mogu sadržavati sitne dijelove. Djeca ne smije koristiti proizvod bez nadzora odrasle osobe.
- Nemojte rastavljati proizvod nego se obratite stručnoj osobi.
- Koristite proizvod prema priloženim uputama.

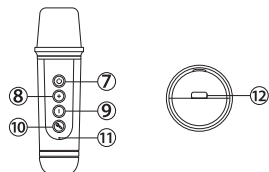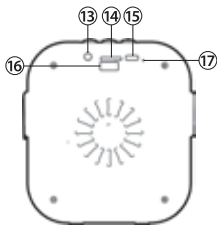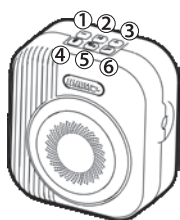

## UVOD U FUNKCIJE

1. Kratki pritisak za smanjenje glasnoće, dugi pritisak jednom za povećanje glasnoće.
2. Ručno prebacivanje načina rada: Bluetooth/TF kartica/U disk itd.
3. Kratki pritisak za dodavanje glasnoće, dugi pritisak jednom.
4. Kratki pritisak za promjenu LED efekta osvjetljenja, dugi pritisak 2 sekunde za isključivanje LED efekta.
5. Dugi pritisak 3 sekunde za uključivanje/isključivanje, kratki pritisak za pauzu/nastavak. Dvostruki klik za uključivanje/isključivanje uparivanja.
6. Kratki pritisak za uključivanje/isključivanje poništavanja šuma.
7. Dugi pritisak 3 sekunde za uključivanje/isključivanje mikrofona, kratki pritisak za utišavanje mikrofona.
8. Kratki pritisak za pojačavanje mikrofona, dvostruki klik za dodavanje reverba.
9. Kratki pritisak za smanjenje glasnoće mikrofona, dvostruki klik za smanjenje reverba.
10. Kratki pritisak za poništavanje originalnog zvuka prilikom otvaranja/zatvaranja zvuka, dugi pritisak za prebacivanje u "čarobni zvuk".
11. Indikator mikrofona:
  - Kada nije povezan – plavo svjetlo trepće
  - Kada je povezan – plavo svjetlo stalno svijetli
  - Kada se puni – crveno svjetlo svijetli
  - Kada je punjenje završeno – crveno svjetlo se gasi
12. Priključak za punjenje mikrofona Type-C 5V.
13. Priključak za slušalice.
14. TF utor – umetnite MP3 audio datoteke, automatski se prebacuje na TF način rada.
15. Sučelje za punjenje Type-C 5V.
16. USB priključak – umetanje MP3 datoteka automatski se prebacuje u USB način rada.
17. Indikator svjetla:
  - Plavo svjetlo trepće kada nije povezano
  - Plavo svjetlo svijetli kada je povezano
  - Crveno svjetlo svijetli kada se puni
  - Crveno svjetlo se gasi kada je punjenje završeno
 
## USB TYPE-C DEMONSTRACIJA PUNJENJA

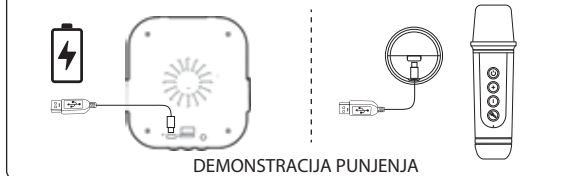

DEMONSTRACIJA PUNJENJA

Spojite jedan kraj priloženog USB TYPE-C kablja na bateriju, a drugi kraj kablja na izvor napajanja



USB Type-C charging cable (INCLUDE)

### Upute za punjenje mikrofona:

1. Uključite USB-A izlaz na kablju u adapter ili uređaj koji ima ulaz za USB-A i mogućnost punjenja poput laptopa.
2. USB-C izlaz na kablju uključite u mikrofon.
3. Crveno svjetlo na mikrofona će svijetliti dok god se mikrofon puni, kada bude pun crveno svjetlo prestaje svijetliti.
4. Kada je mikrofon napunjen isključite ga s punjača i možete ga ponovo koristiti.

### Upute za punjenje stereo zvučnika:

1. Uključite USB-A izlaz na kablju u adapter ili uređaj koji ima ulaz za USB-A i mogućnost punjenja poput laptopa.
2. USB-C izlaz na kablju uključite u zvučnik.
3. Crveno svjetlo na zvučniku će svijetliti dok god se zvučnik puni, kada bude pun crveno svjetlo prestaje svijetliti.
4. Kada je zvučnik napunjen isključite ga s punjača i možete ga ponovo koristiti.

## OPASNOSTI BATERIJA

- NEMOJTE miješati alkalne, standardne (ugljični cink), punjive (nikal hidridne) baterije.
- NEMOJTE miješati stare i nove baterije.
- NEMOJTE miješati punjive i ne punjive baterije.
- Prije punjenja uklonite punjive baterije iz uređaja.
- Punjive baterije treba puniti samo pod nadzorom odraslih.
- Prazne baterije treba ukloniti iz uređaja.
- Ne spajajte kratko kontakte baterija.
- Preporučuje se uporaba samo baterija iste ili ekvivalentne vrste.
- Baterije treba umetnuti s ispravnim polaritetom.

## WARNINGS AND NOTES:

- If the product contains rotating parts (propellers, wheels, etc.), do not touch them while the product is on to avoid injuries.
- Adult supervision is required for using the product according to the prescribed age limit of the product.
- When installing batteries in the product, the batteries specified in the instructions should be used and installed according to the indicated polarity.
- Do not use batteries from different manufacturers at the same time.
- Do not throw batteries or products with batteries into fire.
- If there is damage to the battery or product, it must be disposed of according to the prescribed method of disposing of electronic waste.
- Batteries may contain hazardous substances. Do not damage, puncture, bend, etc. Adult supervision is required for children handling batteries.
- Do not short-circuit batteries.
- If you do not use the product for a long time, remove the batteries from the product if possible.
- Charge batteries only with the prescribed or supplied chargers. If batteries are not charged adequately, there is a risk of fire.
- If the batteries are depleted and cannot be recharged, remove them from the device.
- Use products in safe environments. Do not use products in crowded areas, heavy traffic, or airports.
- Products may contain small parts. Children should not use the product without adult supervision.
- Do not disassemble the product, instead, contact a professional.
- Use the product according to the enclosed instructions.
- Not intended for children under 3 years of age.
- Packaging should not be disposed of in household waste. Please follow appropriate local procedures for disposal.
- This device should not be disposed of with household waste. Take it to a collection point for electrical waste in your community or district to ensure old devices are recycled professionally and economically, preventing harmful effects on the environment and human health.



Bluetooth stereo s jednim mikrofonom  
KAZOO HY834-E

Bluetooth stereo with single microphone  
KAZOO HY834-E

**HR** UPUTSTVA ZA UPOTREBU  
JAMSTVENI LIST  
**EN** USER MANUAL