

WARNINGS AND NOTES:

- If the product contains rotating parts (propellers, wheels, etc.), do not touch them while the product is on to avoid injuries.
- Adult supervision is required for using the product according to the prescribed age limit of the product.
- When installing batteries in the product, the batteries specified in the instructions should be used and installed according to the indicated polarity.
- Do not use batteries from different manufacturers at the same time.
- Do not throw batteries or products with batteries into fire.
- If there is damage to the battery or product, it must be disposed of according to the prescribed method of disposing of electronic waste.
- Batteries may contain hazardous substances. Do not damage, puncture, bend, etc. Adult supervision is required for children handling batteries.
- Do not short-circuit batteries.
- If you do not use the product for a long time, remove the batteries from the product if possible.
- Charge batteries only with the prescribed or supplied chargers.
If batteries are not charged adequately, there is a risk of fire.
- If the batteries are depleted and cannot be recharged, remove them from the device.
- Use products in safe environments. Do not use products in crowded areas, heavy traffic, or airports.
- Products may contain small parts. Children should not use the product without adult supervision.
- Do not disassemble the product, instead, contact a professional.
- Use the product according to the enclosed instructions.
- Not intended for children under 3 years of age.
- Packaging should not be disposed of in household waste. Please follow appropriate local procedures for disposal.
- This device should not be disposed of with household waste. Take it to a collection point for electrical waste in your community or district to ensure old devices are recycled professionally and economically, preventing harmful effects on the environment and human health.



Robot interaktivni KAZOO A101,
daljinsko upravljanje, više boja
Remote-controlled Interactive robot
KAZOO A101, multi color

HR UPUTSTVA ZA UPOTREBU
JAMSTVENI LIST
EN USER MANUAL

Uvod u proizvod



① Područja za dodir

② LED oči

③ Prekidač

④ Svjetlo disanja

BATTERY HAZARDS

- DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (nickel-hydride) batteries.
- DO NOT mix old and new batteries.
- Non-rechargeable batteries should not be recharged.
- Rechargeable batteries must be removed from the device before charging.
- Rechargeable batteries should only be charged under adult supervision.
- Empty batteries must be removed.
- Supply terminals must not be short-circuited.
- It is recommended to use only batteries of the same or equivalent type.
- Batteries should be inserted with the correct polarity.

Batteries are not included in the package!

	Not intended for children under 3 years of age.
	Packaging should not be disposed of in household waste. Please follow appropriate local procedures for disposal.
	This device should not be disposed of with household waste. Take it to a collection point for electrical waste in your community or district to ensure that old devices are recycled professionally and economically, preventing harmful effects on the environment and human health.
	CE Mark Compliance with the requirements of applicable EC directives.
	Recycling Mark This device can be recycled.
	Tested according to international standards.

Specifications, colors, and some parts may differ from the picture.

Product parameter

Product name: Intelligent robot

Product material: Plastic and electronic components

Battery capacity: 350mAh

Battery type: Rechargeable Battery

Rated input: 3.7V

Key	Function description
Switch	1.Long press to power on
	2.Long press power off
Touch key	Voice prompt
Loudspeaker	High fidelity sound
USB charging	Connect the USB cable to charge
Programming	Enter programming
Go the rounds	Move forward in an S shape
Volume	Cycle up the volume, down the volume
Shifting key	1.Forward/backward moving key - front/back directi on gliding;
	2.Left \ right turn moving key - left \ right direction taxi;
Music	Play music, LED expression show - sound column undulation
Dance①	Dynamic music, LED expression show - sound column undulation, Robot moving rotation
Dance②	Dance music plays and the robot moves and spins




5 Zvučnik

6 Priključak za punjenje

Safety precautions

1. The equipment should not be exposed to water droplets or splashes, and liquid-filled objects such as vases should not be placed on the equipment;
2. If the battery is not replaced properly, there is a risk of explosion, and only the same type or equivalent type of battery can be replaced;
3. The battery (battery pack or combination battery) shall not be exposed to similar overheating environment such as sun/fire;
4. Please check the USB connector regularly and replace it in time if it is damaged;
5. The robot can only use recommended transformers;
6. Do not use while charging;
7. The manual contains important information, please keep it properly for future use;
8. Maintenance method: Please use tissue or cloth to wipe, do not wash.


Uvod u daljinski upravljač

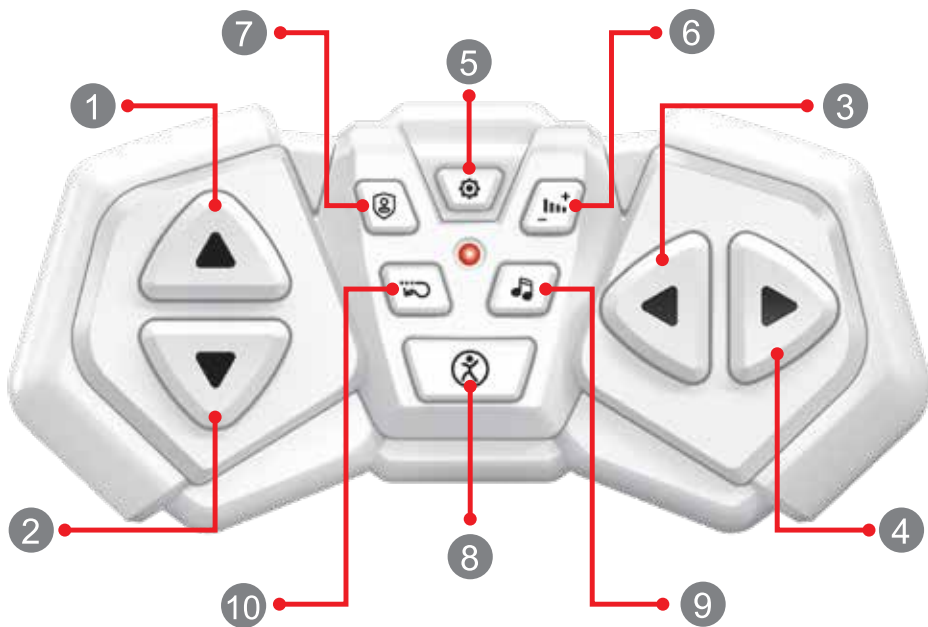

- | | |
|--------------------|-------------------|
| ① Naprijed | ② Natrag |
| ③ Skretanje lijevo | ④ Skretanje desno |
| ⑤ Programiranje | ⑥ Glasnoća |
| ⑦ Ples ① | ⑧ Ples ② |
| ⑨ Glazba | ⑩ Demo način |

WARNING:
This toy produces flashes that may trigger epilepsy in sensitized individuals.


This toy is only to be connected to equipment bearing either of the following symbols:

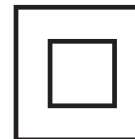

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.



Battery diagram

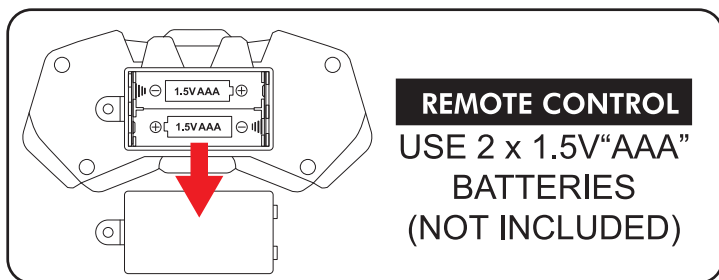

**Each vehicle includes 1 x 3.7V Li-ion Battery and USB charge line
The Remote Control requires 2x1.5V AAA batteries (Not Included)**

For best performance use only Alkaline or Rechargeable NiMH Batteries

Observe correct polarity when inserting batteries

Use only Alkaline or Rechargeable Batteries — Do Not Mix Types!

Remove discharged batteries from the Remote Control immediately

Remove batteries from Remote Control when toy is stored

1. The USB-C cable included in the package must be connected to an adapter or a device with a USB-C input and charging capability.
2. After that, connect the USB-C output to the device.
3. The robot's eyes will light up while the device is charging; when the battery is fully charged, the robot's eyes will turn off.
4. Once the battery is fully charged, you can disconnect the device from the charger.

SPECIFICATIONS COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATIONS.

Upravlajte svojim robotom

1. Dugi pritisak za uključivanje
2. Dugi pritisak za isključivanje



Dugi pritisak na prekidač



3. Stanje mirovanja

Svakih 1 minutu reproducira se zvuk pripravnosti, a 4 minute nakon toga čuje se zvuk isključivanja i robot prelazi u stanje mirovanja.

4. Upozorenje na nisku razinu baterije

5. Funkcija dodira



Područje za dodir



6. Kretanje naprijed/nazad

Naprijed: dugi pritisak na pojedinačnu tipku pokreće robota prema naprijed, puštanjem se zaustavlja; držanjem tipke za naprijed i zatim dugim pritiskom lijeve ili desne tipke može se upravljati smjerom robota.


Nazad: pritisnite pojedinačnu tipku i držite da se robot kreće unatrag, puštanjem se zaustavlja; držanjem tipke za nazad i ponovnim pritiskom lijeve ili desne tipke može se upravljati smjerom robota.



7. Skretanje lijevo/desno

Skretanje lijevo: pritisnite i držite robota da skreće lijevo, puštanjem se zaustavlja; držite tipku za lijevo skretanje i zatim dugo pritisnite tipke za naprijed ili nazad — moguće je upravljati smjerom robota.

Skretanje desno: pritisnite i držite robota da skreće desno, puštanjem se zaustavlja; držite tipku za desno skretanje i zatim ponovno dugo pritisnite tipke za naprijed ili nazad — moguće je upravljati smjerom robota.

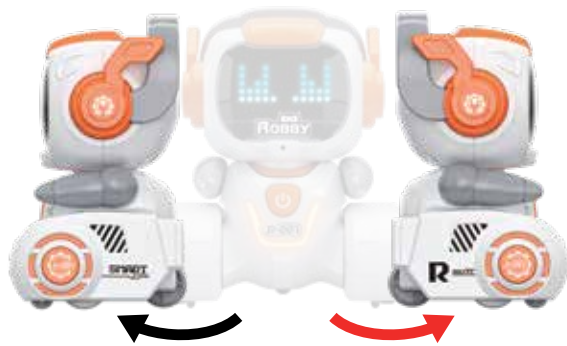


6.

8. Dance ①

9. Dance ②

10. Music

11. Demo Mode

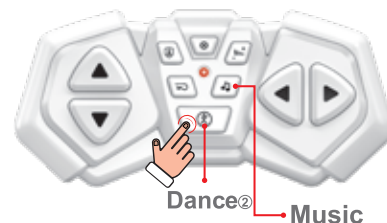

12. Programming

Press the programming button to start "Programming Mode", and then start programming the required actions, up to 30 programs Actions; Press the programming button again to end programming. Then the robot will play as what you've programmed. If there is no programming content or programming is full Sound prompts.

13. Volume

Press the volume button to change the volume as shown below (100% volume by default)


① 100% ② 75% ③ 50% ④ 25% ⑤ 50% ⑥ 75%

19.

6. Forward/Backward

Forward: the single key has been long press the robot has been forward, release to stop; Hold the forward button long and then long; The left and right keys can be combined to control the robot's steering.


Backward: press the single key and hold the robot back all the time, release and stop; Hold the back button long and press again; The left and right keys can be combined to control the robot's steering.

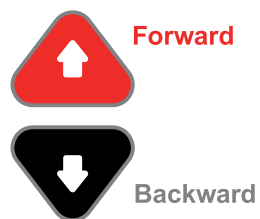

7. Turn Left/Turn Right

Turn Left: press and hold the robot left turn, release and stop; Hold the left turn button long and press long; The forward and back keys can be combined to control the robot's steering.

Turn Right: press and hold the robot to the left, release and stop; Hold the right turn button long and press again; The forward and back keys can be combined to control the robot's steering.

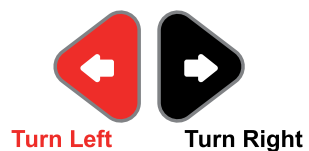


18.

8. Ples ①

9. Ples ②

10. Glazba

11. Demo način

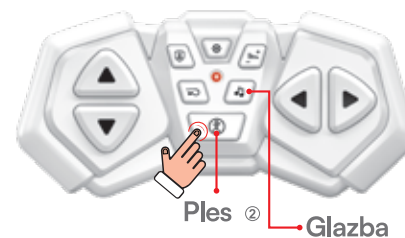

12. Programiranje

Pritisnite tipku za programiranje kako biste pokrenuli "Način programiranja", zatim programirajte željene radnje, do 30 programiranih radnji;

Pritisnite tipku za programiranje ponovno kako biste završili s programiranjem. Tada će robot izvoditi radnje koje ste programirali. Ako nema sadržaja za programiranje, bit će reproducirane zvučne upute.


13. Glasnoća

Pritisnite tipku za glasnoću kako biste promijenili razinu glasnoće kako je prikazano u nastavku (zadana glasnoća je 100%).

① 100% ② 75% ③ 50% ④ 25% ⑤ 50% ⑥ 75%

7.

Dijagram baterije

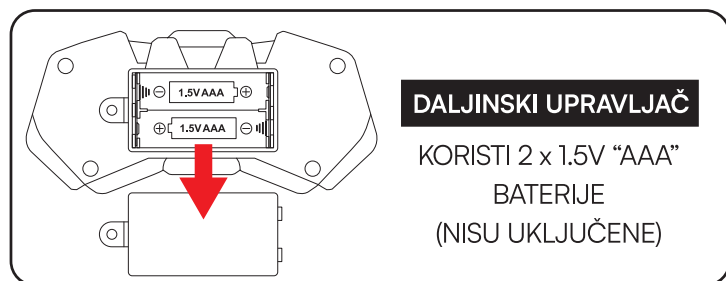

Svako vozilo uključuje 1 x 3.7V Li-ion bateriju i USB kabel za punjenje
Daljinski upravljač koristi 2 x 1.5V AAA baterije (nisu uključene)

Za najbolje performanse koristite samo alkalne ili punjive NiMH baterije

- Pridržavajte se ispravne polarizacije pri umetanja baterija
- Koristite samo alkalne ili punjive baterije — nemojte miješati vrste
- Ispraznjene baterije odmah uklonite iz daljinskog upravljača
- Uklonite baterije iz daljinskog upravljača kad se ne koristi

1. USB-C kabel koji je uključen u pakiranje je potrebno uključiti u adapter ili uređaj s USB-C ulazom i mogućnošću punjenja.
2. Nakon toga potrebno je USB-C izlaz uključiti u uređaj.
3. Oči na robotu svijetle dok god se uređaj puni, kada se baterija napuni do kraja oči na robotu prestanu svijetliti.
4. Nakon što se baterija napuni možete isključiti uređaj s punjača.

SPECIFIKACIJE, BOJE I SADRŽAJ MOGU SE RAZLIKOVATI OD PRIKAZANOG NA ILUSTRACIJAMA

Control Your Robot

1. Long press to power on
2. Long press to power off



Long press to switch



3. Rest State

Every 1 minute play a standby prompt sound, 4 minutes after the prompt shutdown sound shutdown sleep.

4. Lower power alert


5. Touch function



Touch area



Remote Control Introduction

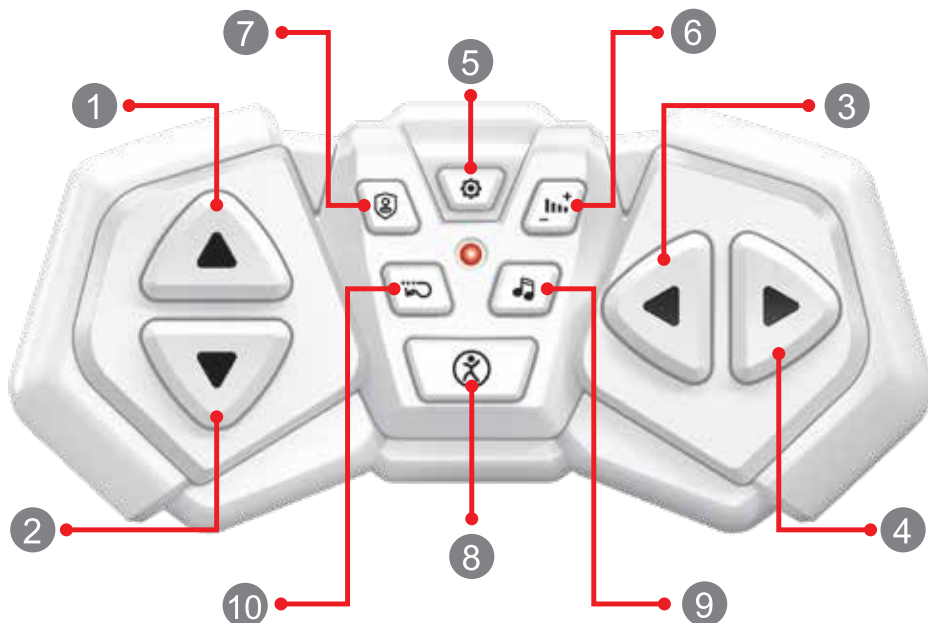


- | | |
|---------------|--------------|
| ① Forward | ② Backward |
| ③ Turn Left | ④ Turn Right |
| ⑤ Programming | ⑥ Volume |
| ⑦ Dance ① | ⑧ Dance ② |
| ⑨ Music | ⑩ Demo Mode |

UPOZORENJE:

Ova igračka proizvodi bljeskove koji mogu potaknuti epilepsiju kod osjetljivih osoba.

Ova igračka smije se povezivati samo s uređajima koji nose jednu od sljedećih oznaka:

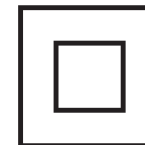

! **UPOZORENJE:**
OPASNOST OD GUŠENJA — Sadrži sitne dijelove.
 Nije za djecu mlađu od 3 godine.

Pakiranje treba sačuvati jer sadrži važne informacije.
 Održavanje: čistiti suhom i mekom krpom.

**UK
CA**



Parametri proizvoda

Naziv proizvoda: Inteligentni robot

Materijal proizvoda: Plastika i elektroničke komponente

Kapacitet baterije: 350mAh

Vrsta baterije: Punjiva baterija

Nazivni napon: 3.7V

Tipka	Opis funkcije
Prekidač	1. Dugi pritisak za uključivanje
	2. Dugi pritisak za isključivanje
Tipka za dodir	Glasovna poruka
Zvučnik	Zvuk visoke kvalitete
USB punjenje	Spojite USB kabel za punjenje
Programiranje	Ulazak u način programiranja
Kružna vožnja	Kretanje naprijed u obliku slova S
Glasnoća	Povećavanje/smanjivanje glasnoće
Tipka smjera	1. Tipke za kretanje naprijed/nazad — smjer naprijed/nazad na podlozi za klizanje
	2. Tipke za lijevo/desno skretanje — taksi vožnja lijevo/desno
Glazba	Reprodukcija glazbe, LED izrazi — oscilacije zvučne kolone
Ples ①	Dinamična glazba, LED izrazi — oscilacije zvučne kolone, rotacija robota
Ples ②	Reproducira plesnu glazbu, robot se kreće i vrti

Sigurnosna upozorenja

1. Uređaj se ne smije izlagati kapljicama vode, prskanju ni tekućim predmetima poput vaza postavljenih na uređaj.
2. Ako se baterija ne zamijeni ispravno, postoji opasnost od eksplozije. Može se koristiti samo ista ili ekvivalentna vrsta baterije.
3. Baterije (pojedinačne ili u kombinaciji) ne smiju se izlagati ekstremnim uvjetima kao što su sunce/vatra.
4. Redovito provjeravajte USB priključak i zamijenite ga na vrijeme ako je oštećen.
5. Robot smije koristiti samo preporučene transformatore.
6. Ne koristiti tijekom punjenja.
7. Upute sadrže važne informacije — čuvajte ih za buduću upotrebu.
8. Način održavanja: koristite papirnatu maramicu ili krpu za čišćenje, ne perite.



5 Loudspeaker **6 Charging Port**

Product Introduction



① Touch Area

② LED Eyes

③ Switch

④ Breathing Light

OPASNOSTI BATERIJA

- NEMOJTE miješati alkalne, standardne (ugljični cink), punjive (nikal hidridne) baterije.
- NEMOJTE miješati stare i nove baterije.
- NEMOJTE miješati punjive i ne punjive baterije.
- Prije punjenja uklonite punjive baterije iz uređaja
- Punjive baterije treba puniti samo pod nadzorom odraslih.
- Prazne baterije treba ukloniti iz uređaja.
- Ne spajajte kratko kontakte baterija.
- Preporučuje se uporaba samo baterija iste ili ekvivalentne vrste.
- Baterije treba umetnuti s ispravnim polaritetom.

Baterije ne dolaze u pakiranju!

	Nije namijenjeno za djecu mlađu od 3 godine.
	Ambalaža se ne smije odlagati u kućni otpad. Molimo postupajte u skladu s odgovarajućim lokalnim procedurama za odlaganje.
	Ovaj uređaj se ne odlaže s kućnim otpadom. Predajte ga u sabirno mjesto za električki otpad u vašoj zajednici ili okrugu, kako bi se osiguralo da se stari uređaji recikliraju profesionalno, ekonomično i da se spriječi štetni utjecaj na okoliš i ljudsko zdravlje.
	CE oznaka Sukladnost sa zahtjevima važećih EC direktiva.
	Oznaka recikliranja Ovaj uređaj se može reciklirati.
	Testirano prema međunarodnim standardima

Specifikacije, boje i neki dijelovi mogu se razlikovati od slike.

UPOZORENJA I NAPOMENE:

- Ako proizvod sadrži rotirajuće dijelove (elise, kotače ...), nemojte ih dirati dok je proizvod upaljen kako bi izbjegli ozlijede.
- Nadzor odrasle osobe je potreban za korištenje proizvoda prema propisanoj dobnoj granici proizvoda.
- Prilikom ugradnje baterija u proizvod trebaju biti korištene baterije naznačene u uputama i trebaju biti ugrađene prema naznačenom polaritetu.
- Ne koristite baterije različitih proizvođača u isto vrijeme.
- Ne stavljajte baterije ili proizvode sa baterijama u vatru.
- Ako postoje oštećenja na bateriji ili proizvodu mora se zbrinuti prema propisanom načina zbrinjavanja električnog otpada.
- Baterije mogu sadržavati opasne tvari. Nemojte ih oštetiti, bušiti, savijati i slično. Nadzor odrasle osobe je potreban djeci prilikom rukovanja baterijama.
- Nemojte kratko spajati baterije.
- Ako dugo ne koristite proizvod, izvadite baterije iz proizvoda ako je to moguće.
- Baterije punite samo propisanim ili priloženim punjačima. Ako se baterije ne pune adekvatnim načinom, postoji opasnost od požara.
- Ako su baterije potrošene te se ne mogu napuniti uklonite ih iz uređaja.
- Koristite proizvode u sigurnim okruženjima. Nemojte koristiti proizvode u prostorima gdje je puno ljudi, gusta naseljenost, promet i zračna luka.
- Proizvodi mogu sadržavati sitne dijelove. Djeca ne smije koristiti proizvod bez nadzora odrasle osobe.
- Nemojte rastavljati proizvod nego se obratite stručnoj osobi.
- Koristite proizvod prema priloženim uputama.

JAMSTVENI LIST

Jamstveni rok počinje teći od datuma kupnje proizvoda.

Trajanje jamstva je 1 godina.

U slučaju kvara uređaj možete reklamirati izravno u trgovini u kojoj je kupljen.

U slučaju manjeg popravka jamstveni rok se produljuje onoliko koliko je kupac bio lišen upotrebe stvari, međutim kada je zbog neispravnosti stvari izvršena njezina zamjena ili njezin bitni popravak, jamstveni rok počinje teći ponovo od zamjene, odnosno vraćanja popravljene stvari. Ako je zamijenjen ili bitno popravljen samo neki dio stvari, jamstveni rok počinje teći ponovno samo za taj dio.

Jamstvo se priznaje samo uz račun o kupnji, ovaj jamstveni list, te detaljan opis kvara.

Ukoliko nije definiran opis kvara, podrazumijeva se da je opis kvara „ne radi“, te da će se uređaj testirati samo na osnovnu funkcionalnost.

Jamstvo se ne priznaje u sljedećim uvjetima:

- Ako kupac ne predoči ispravan jamstveni list i račun o kupnji.
- Ako se kupac nije pridržavao uputa o korištenju proizvoda.
- Ako je proizvod otvaran, prepravljan ili popravljan od neovlaštene osobe.
- Ako su kvarovi na proizvodu nastali djelovanjem više sile kao što su: udar groma, strujni udar u električnoj mreži, elementarne nepogode i sl..
- Ako su kvarovi nastali oštećivanjem, zbog nepropisne upotrebe ili nepravilnim transportiranjem.

Ako je kvar nastao greškom u sustavu na koji je proizvod uključen

Ovo jamstvo ne mijenja zakonska potrošačka prava važeća u Republici Hrvatskoj u odnosu na ona koja propisuje proizvođač.

Ovlašteni servis: Feniks Info d.o.o. Slavonska avenija 72, HR-10000 Zagreb,
servis@feniks-info.hr
tel. 091 3344 271

Datum kupnje:_____

Pečat i potpis:_____